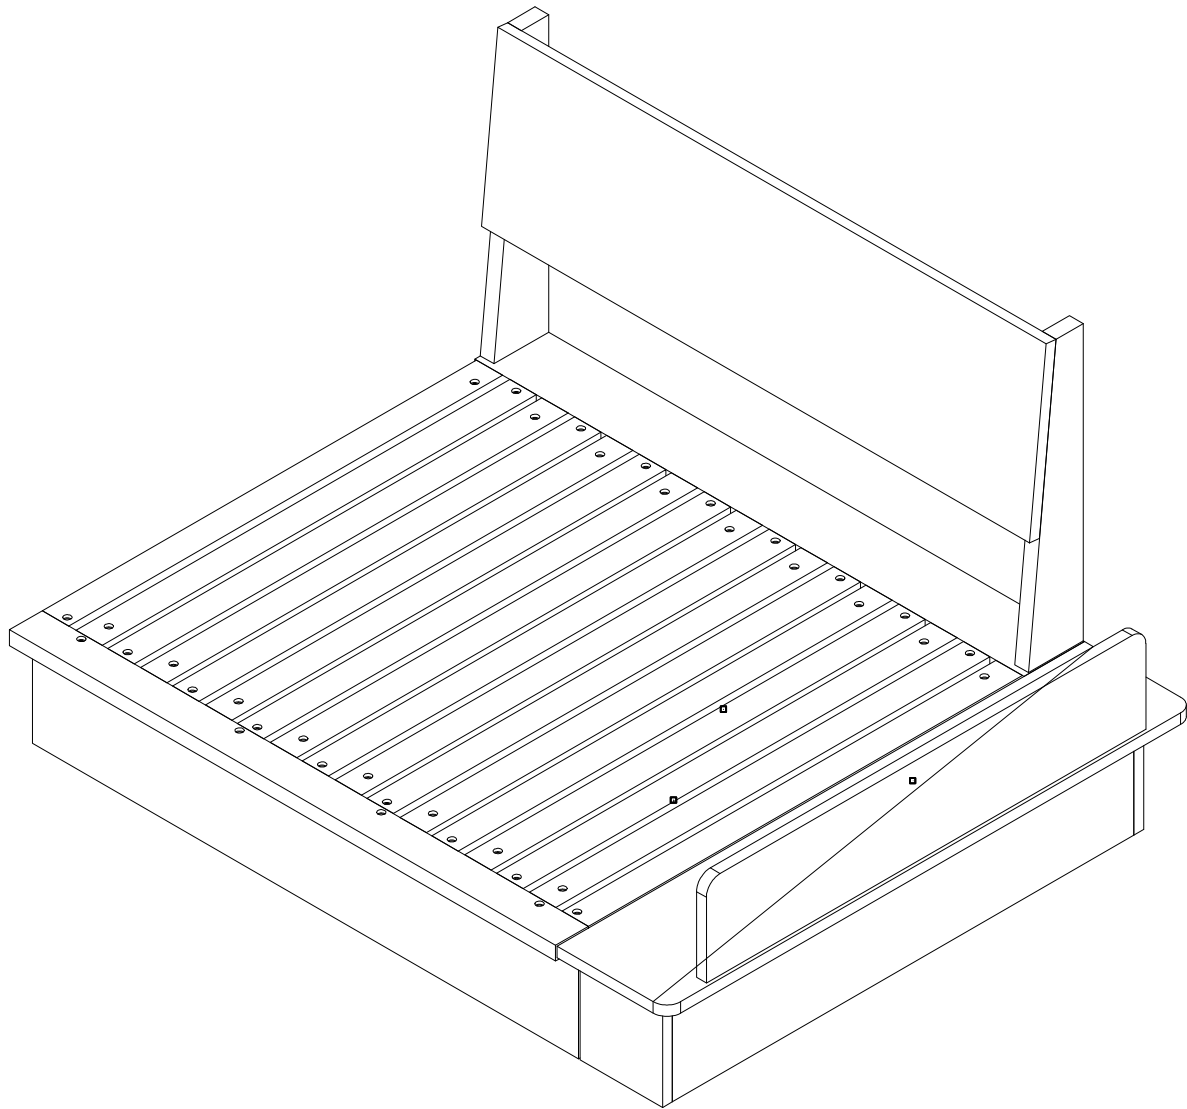


USER'S MANUAL



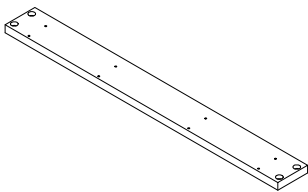
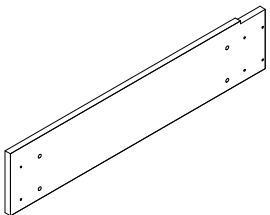
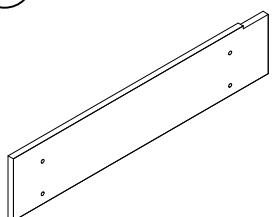
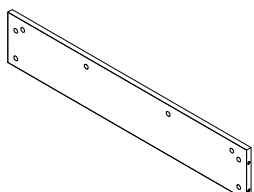
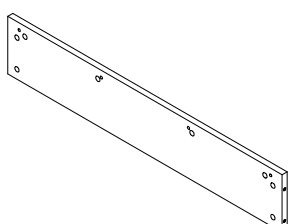
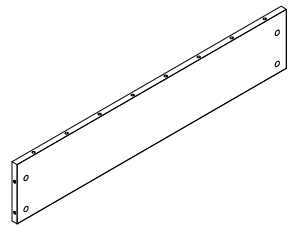
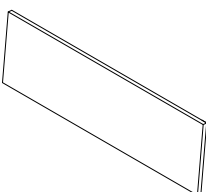
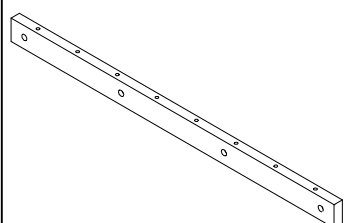
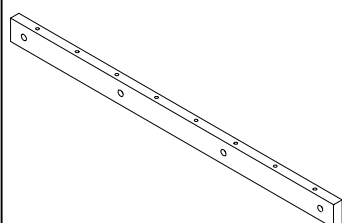
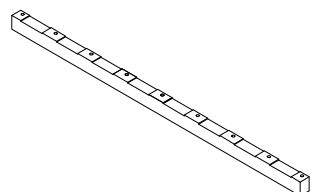
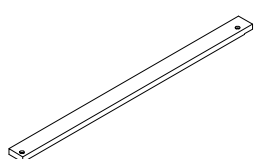
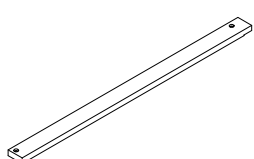
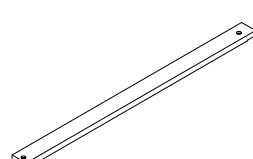
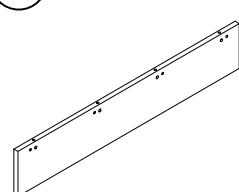
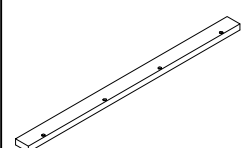
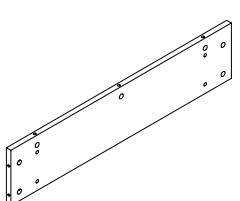
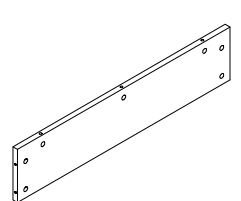

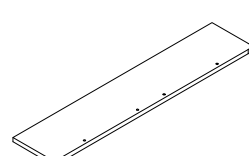
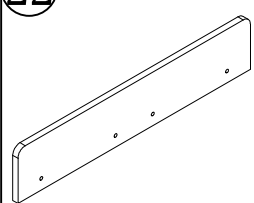
S2311K 1.2M SOFA











WARNING

- Must follow every steps, otherwise the board will damage due to incorrect assemble
- Do not use this product unless all screws and bolts are securely tightened.
- Check that all screws and bolts are secure every three months or as needed
- Dispose of packing material properly.
- Do not use plastic cover as head covering as it may cause
- Do not use this product as a stepladder.
- Use this product for intended purpose only.
- Intended for residential use only.



PARTS LIST

1 	2 	3 	4 	
Left back support panel x1	Right back support panel x1	Back top panel x1	Left side panel x1	
5 	6 	7 	8 	
Right side panel x1	Back side panel(inside) x1	Back side panel(outside) x1	Front panel x1	
9 	10 	11 	12 	
Backrest panel x1	Base back rod(962) x1	Base back rod(958) x1	Pine wood rod x1	
13 	14 	15 	16 	17 
Left seat panel x1	Right seat panel x1	Seat panel x15	Front panel of extendable base frame x1	Front panel of extendable base frame x1
18 	19 	20 	21 	22 
Arm side panel x1	Arm side panel x1	Arm front&back panel x2	Arm top panel x1	Arm cushion support panel x1

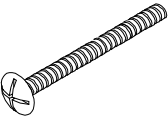
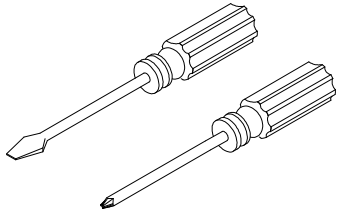
HARDWARE LIST

A	B	C	D	E
				
8*55 Screw x8	8mm Hammer nut x4	3 in 1 Screw x36	3 in 1 Nut x36	6mm Ring x50
F	G	H	I	J
				
6*25 Screw x8	6*50 Screw x44	6mm Hammer nut x35	6mm Connecting nut x16	6*30 Threaded rod x8
K				
				
Pad x20	Hole sticker x25			
				
			phillips head screw driver required for assemble---not include	

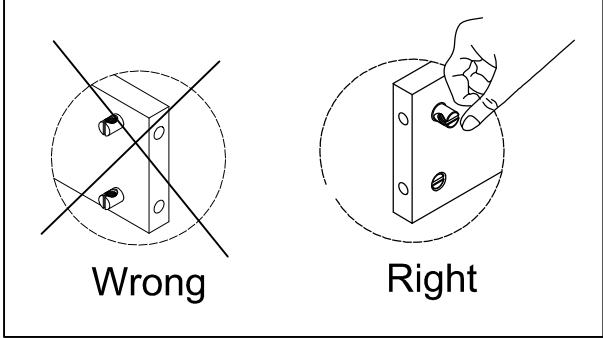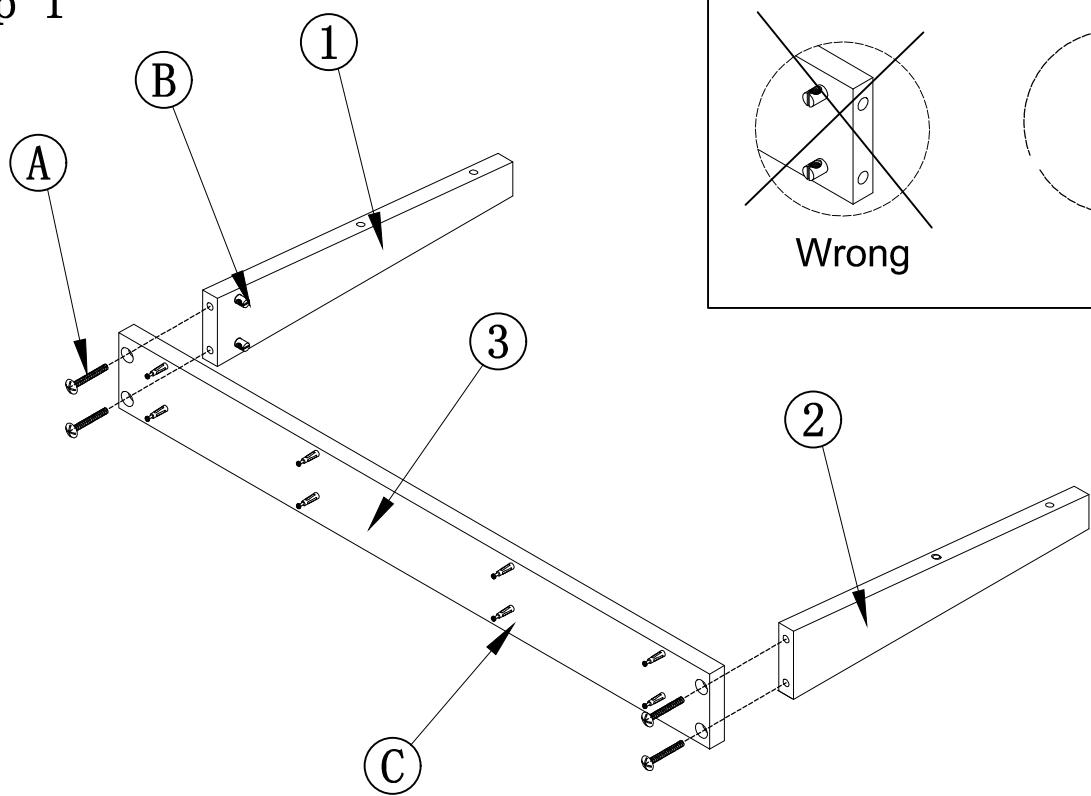
Step 1



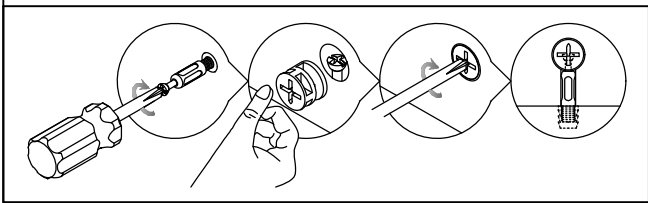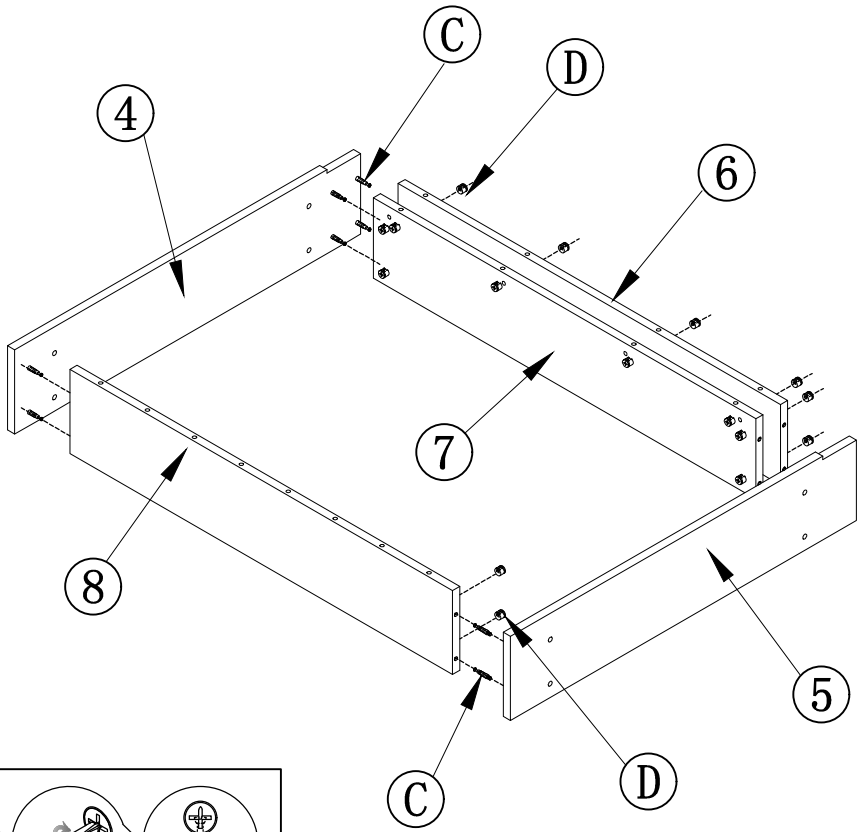Step 2




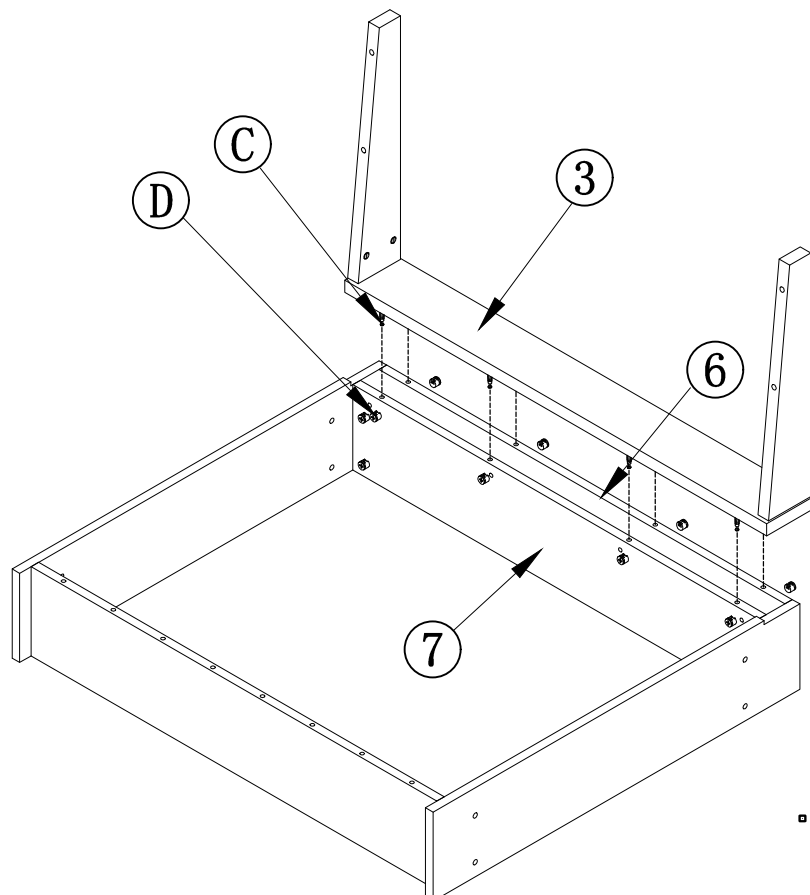Step 3




Please follow instructions
If the board has not been locked, it will damage and cannot hold weight

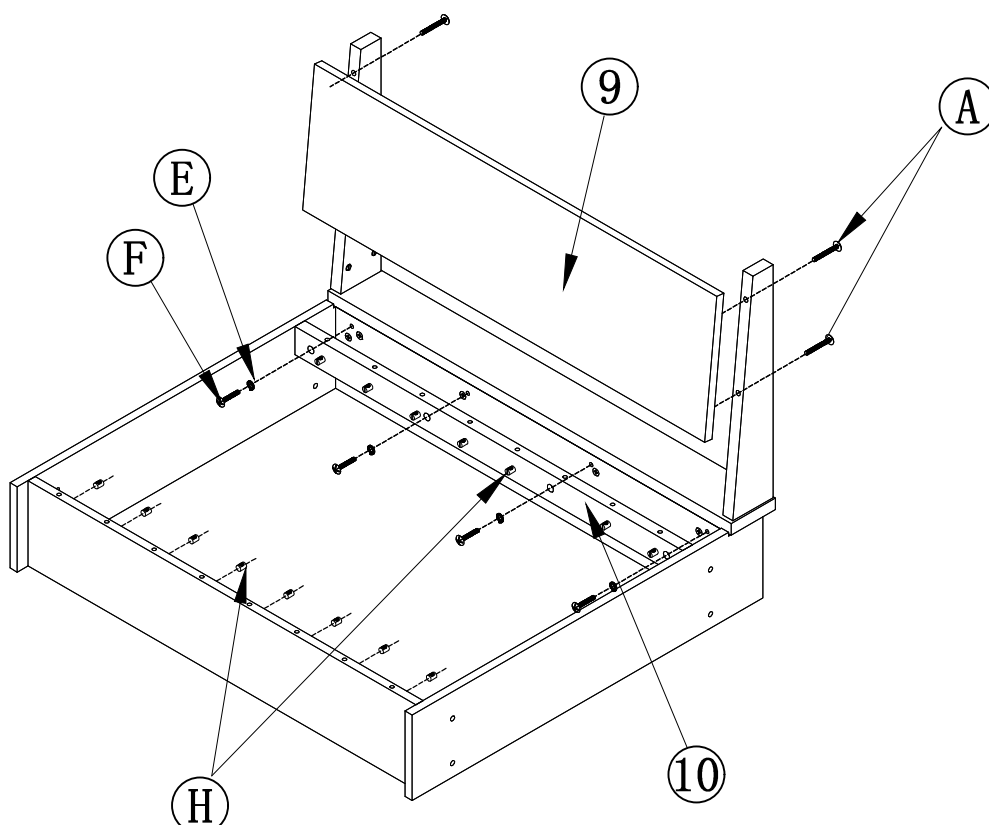Step 4




Please follow instructions
If the board has not been locked, it will damage and cannot hold weight

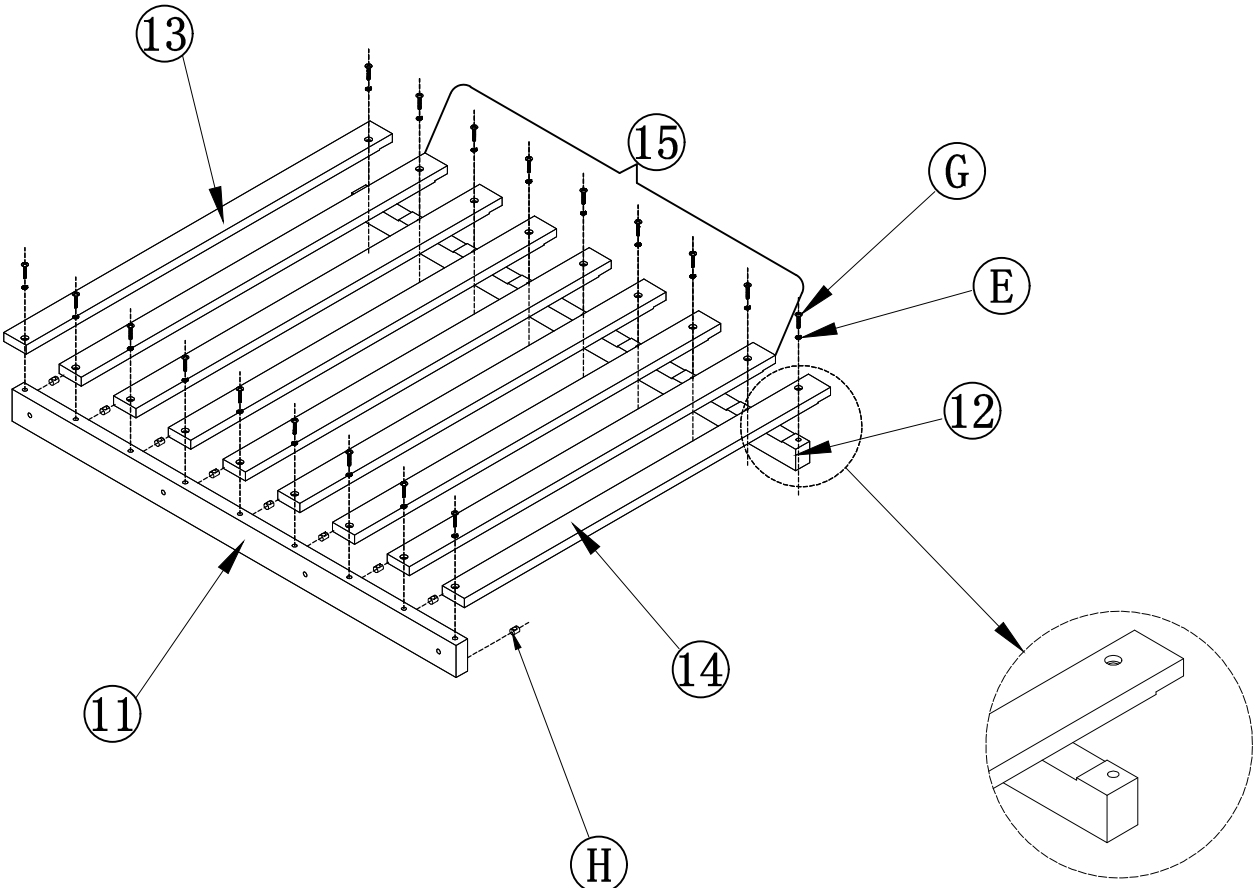
Step 5



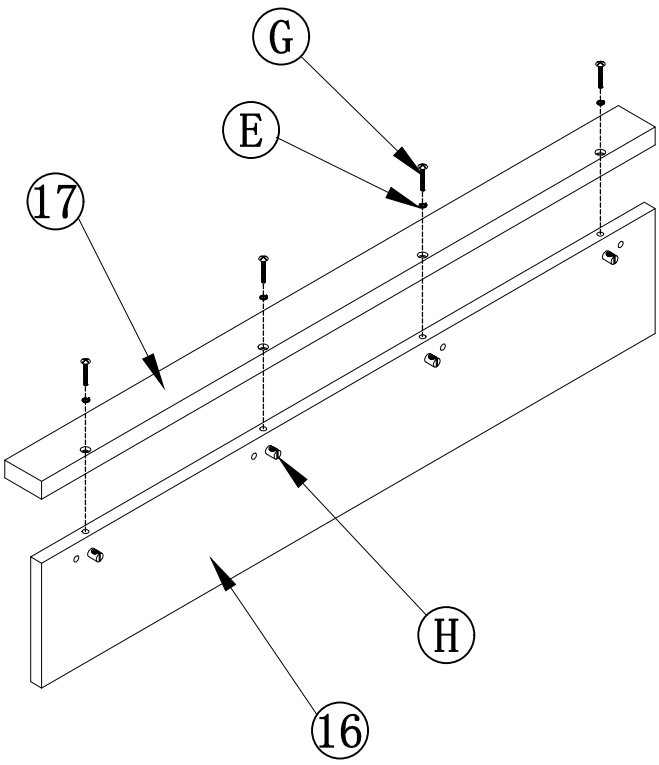
Step 6



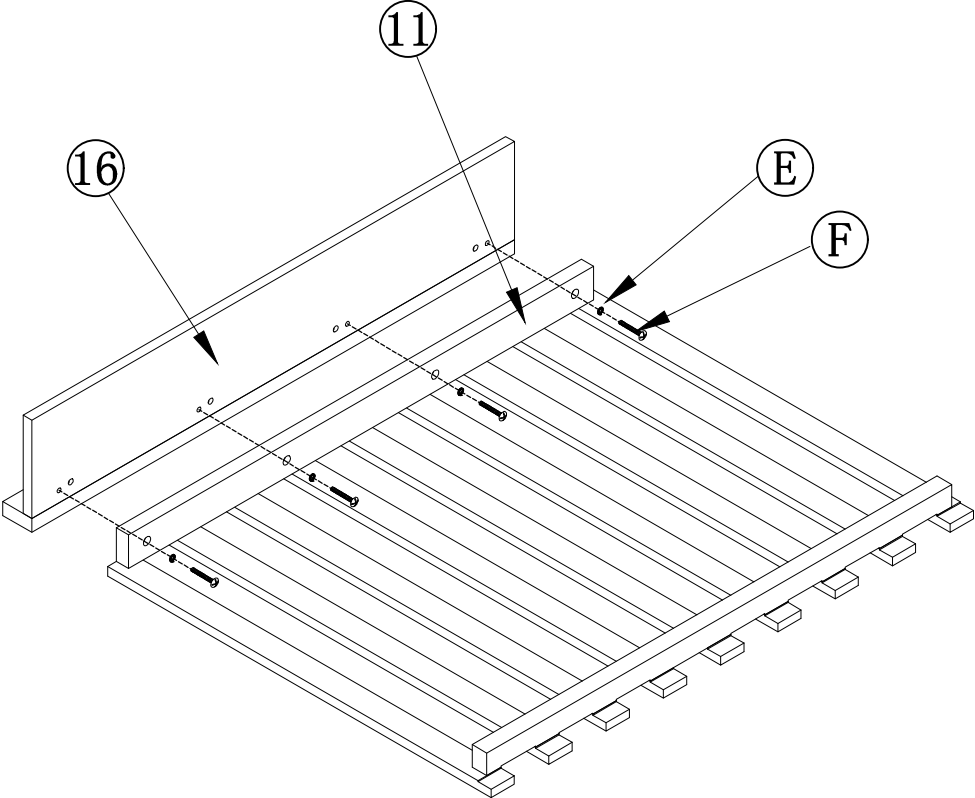
Step 7



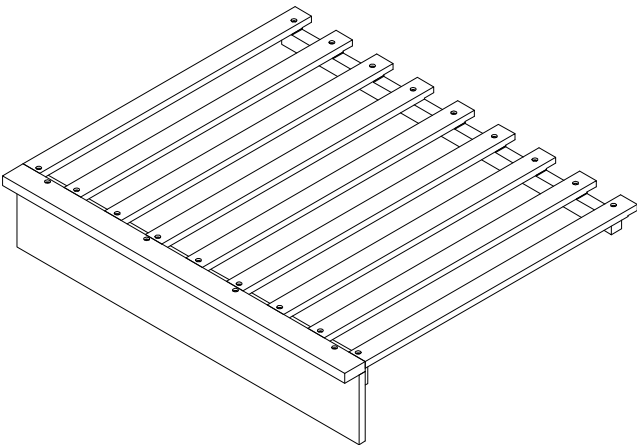Step 8




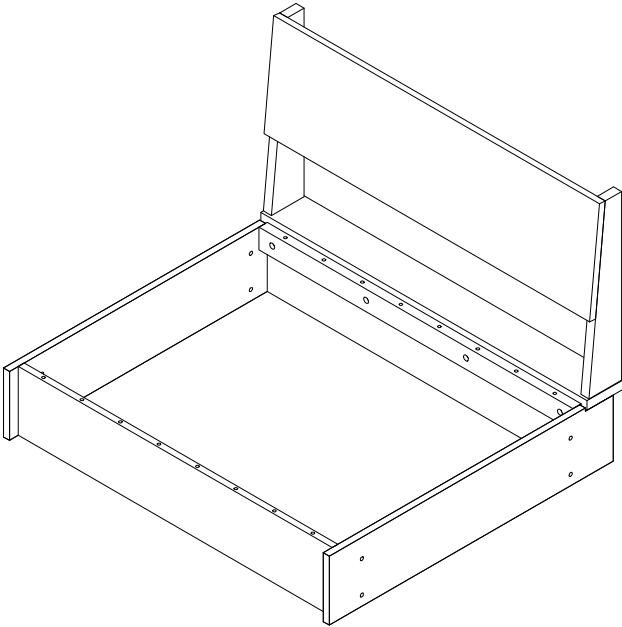the completed assembly
extendable base frame




the completed assembly
base frame

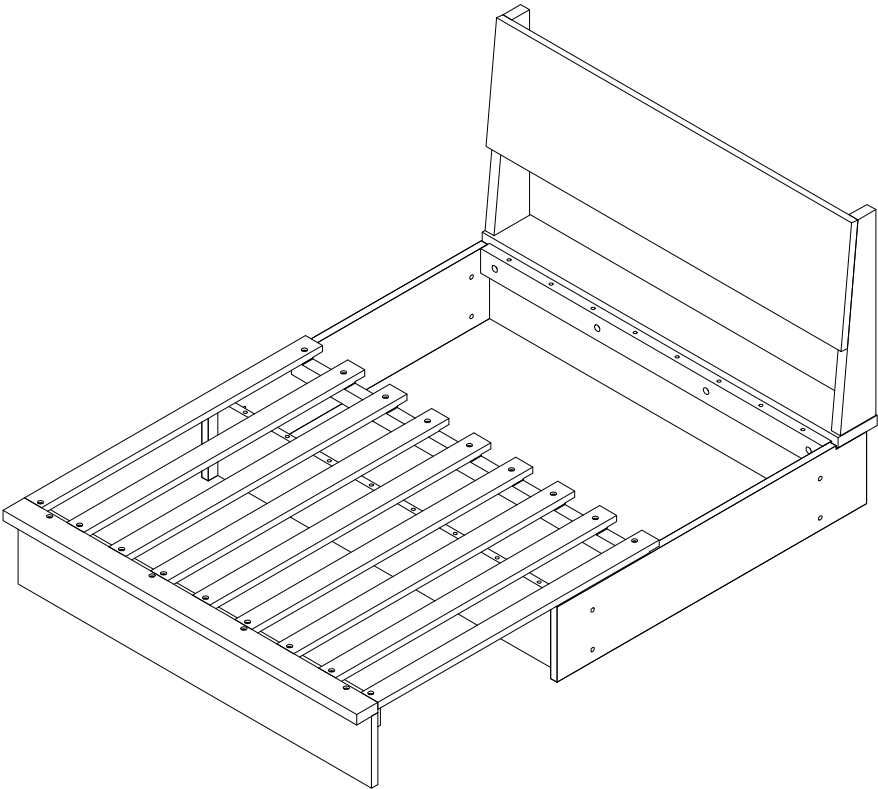
Step 9





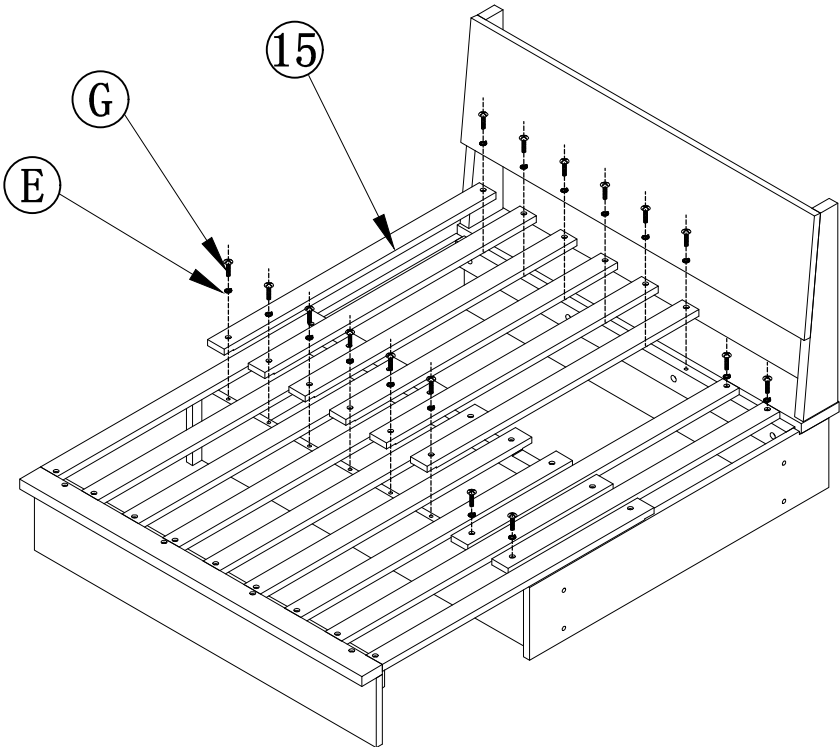
Step 10



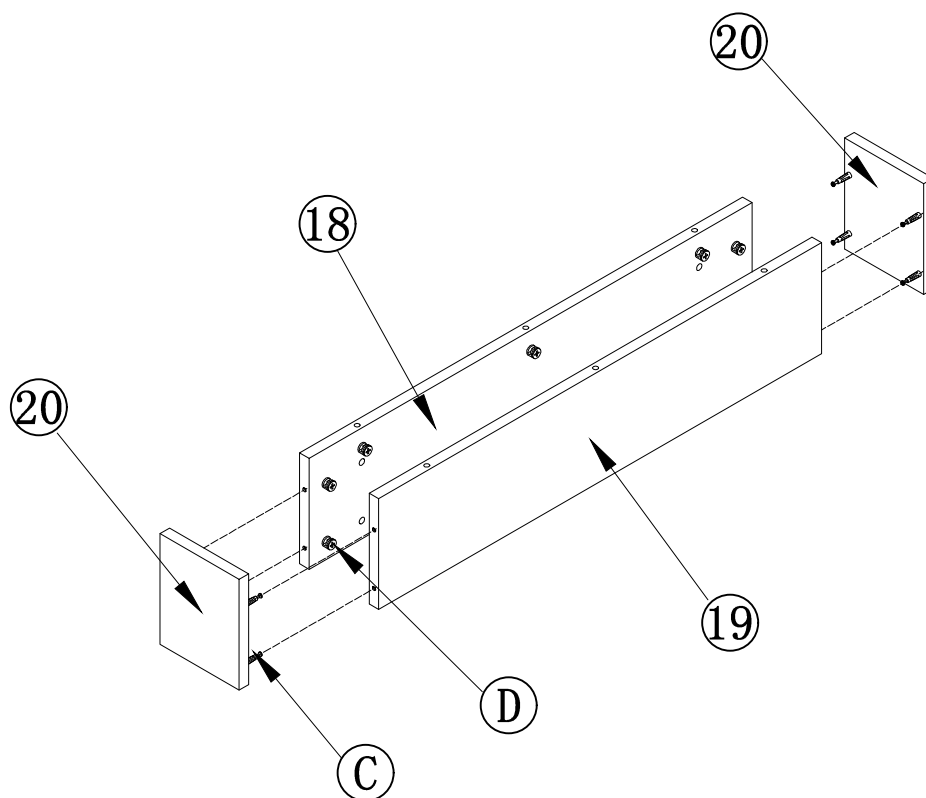Step 11




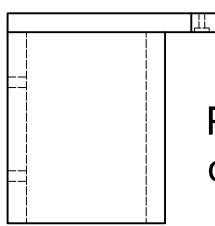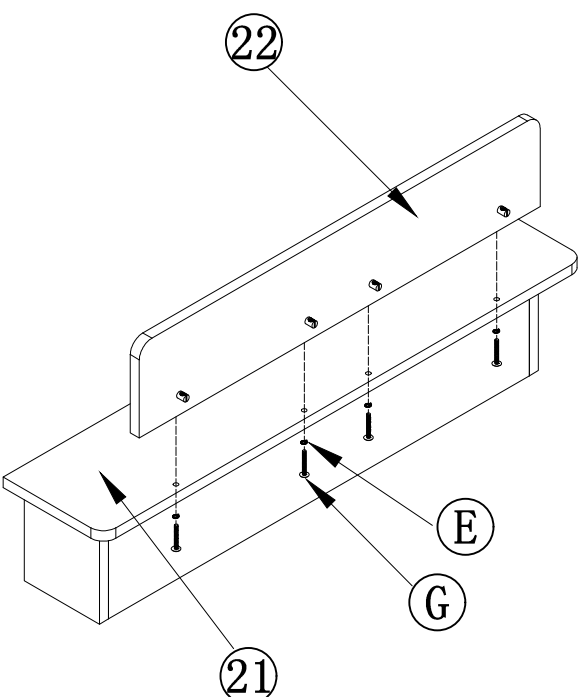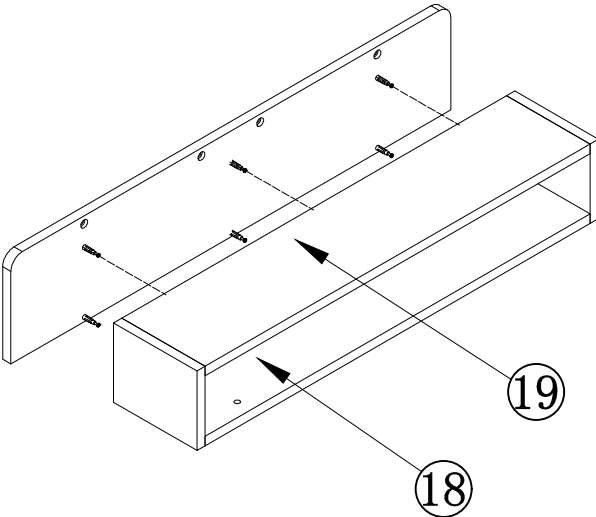Step 12




Please pay attention
on the direction

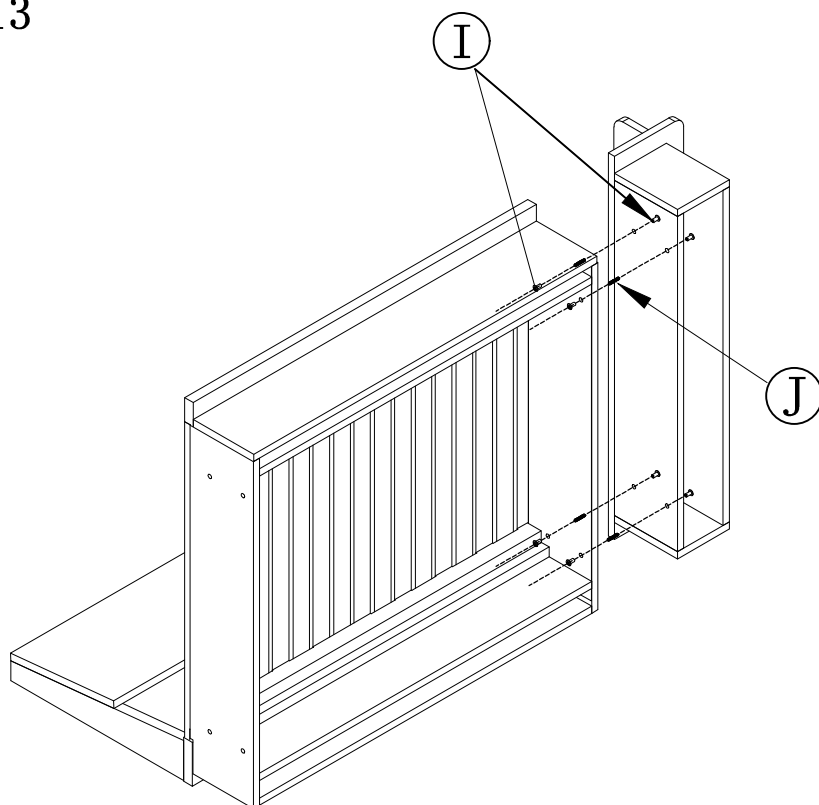Step 13




Please stick the **【K】** pad on bottom

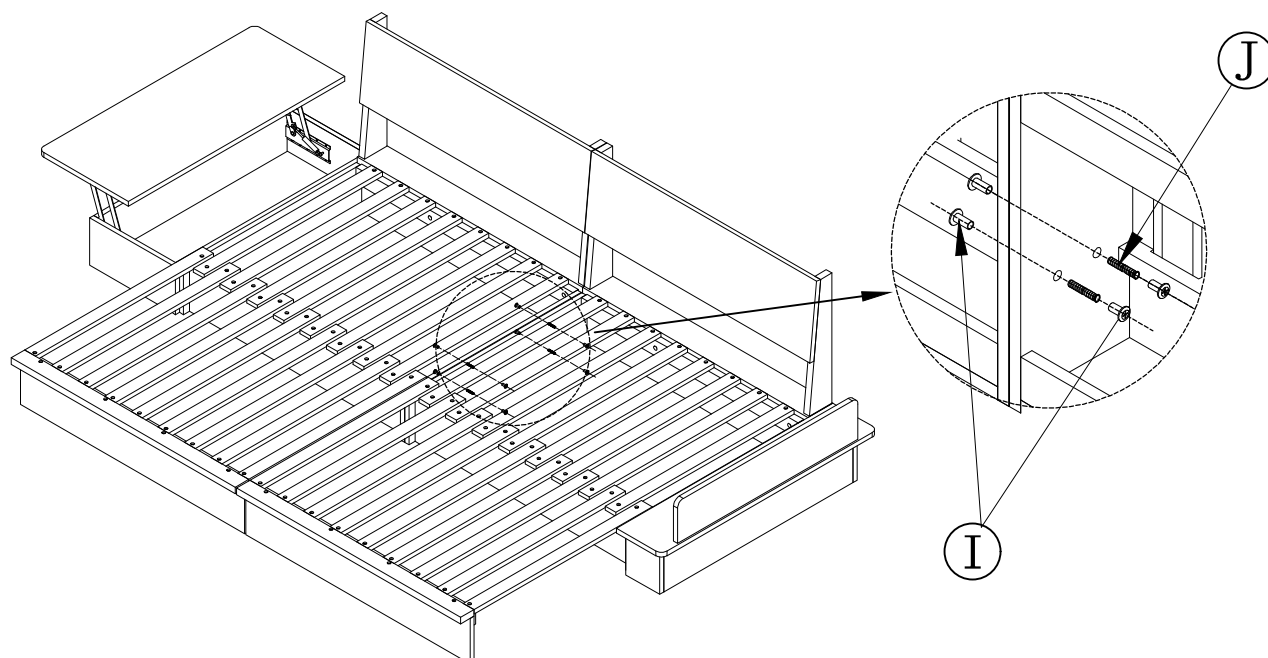Step 14




Extend the bottom frame and align the hole position

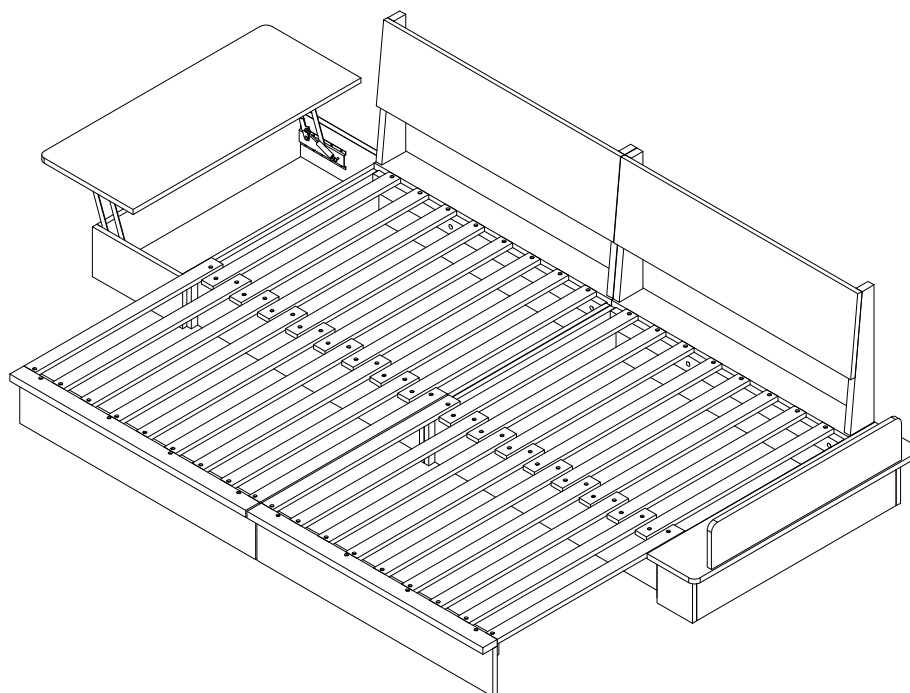Step 15



The armrest is reversible

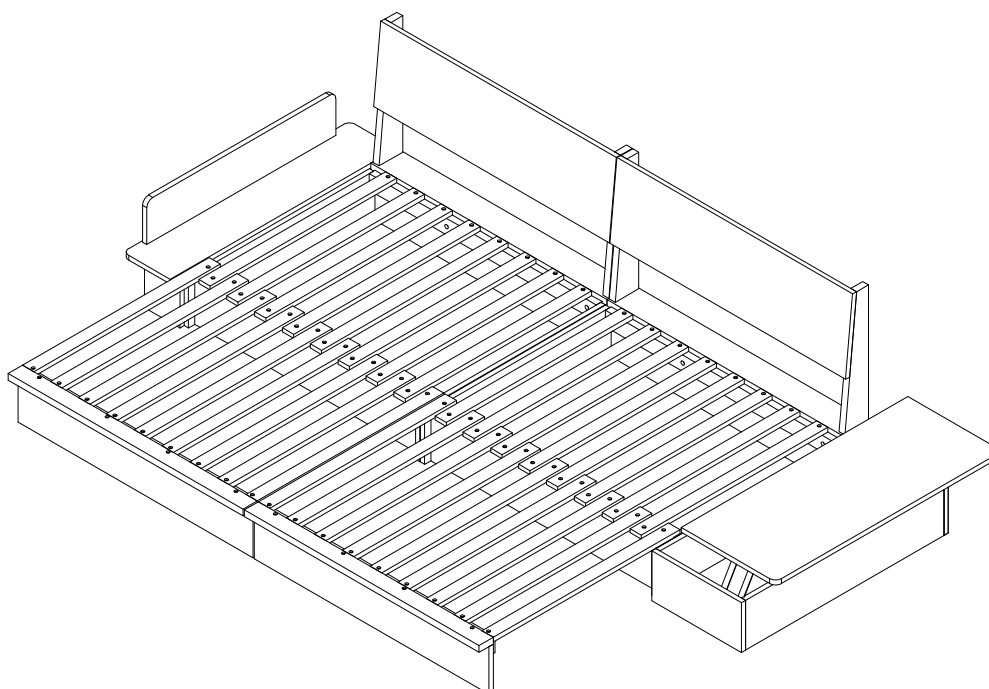Step 16



The armrest is reversible